



# I&O Manual

## TOPIN 6&12V Monobloc Batteries

Version: 6.0

Issue Date: AUG 2025

**TO BE INSTALLED BY A SUITABLY QUALIFIED ELECTRICIAN ONLY**



AUSTRALIA

1300 734 253

sales@valen.com.au

www.valen.com.au

NEW ZEALAND

0800 734 253

sales@valen.co.nz

www.valen.co.nz

## Table of Contents

| SECTION    | CONTENT                          | PAGE      |
|------------|----------------------------------|-----------|
| <b>1.0</b> | <b>GENERAL INFORMATION</b>       | <b>3</b>  |
| 1.1        | Battery Characteristics          | 3         |
| <b>2.0</b> | <b>SAFETY INFORMATION</b>        | <b>3</b>  |
| 2.1        | General Information              | 3         |
| 2.2        | Sulphuric Acid                   | 3         |
| 2.3        | Gassing                          | 3         |
| 2.4        | Electrical Shock                 | 3         |
| <b>3.0</b> | <b>RECEIPT OF EQUIPMENT</b>      | <b>4</b>  |
| 3.1        | Delivery Inspection              | 4         |
| 3.2        | Hidden Damage                    | 4         |
| <b>4.0</b> | <b>STORAGE</b>                   | <b>4</b>  |
| 4.1        | General                          | 4         |
| 4.2        | Short Term Storage               | 4         |
| <b>5.0</b> | <b>INSTALLATION PROCEDURES</b>   | <b>4</b>  |
| 5.1        | Battery Location                 | 4         |
| 5.1.1      | Temperature                      | 4         |
| 5.1.2      | Temperature Variation            | 4         |
| 5.1.3      | Ventilation                      | 5         |
| 5.1.3.1    | Battery Temperature Variation    | 5         |
| 5.1.3.2    | Ventilation & Gassing            | 5         |
| 5.1.4      | Floor Loading                    | 5         |
| 5.2        | Seismic Considerations           | 5         |
| 5.3        | Installation - Cabinets          | 5         |
| 5.4        | Installation - Racks             | 5         |
| 5.4.1      | Existing Racks                   | 5         |
| 5.4.2      | New Racks                        | 5         |
| 5.4.3      | Installation                     | 6         |
| 5.5        | Electrical Connections           | 6         |
| 5.5.1      | Cabling Recommendations          | 6         |
| 5.5.2      | Terminal Preparation             | 6         |
| 5.5.3      | Connector Installation           | 6         |
| 5.5.4      | Voltage Checks                   | 6         |
| 5.5.5      | Battery to Charger Connection    | 7         |
| 5.5.6      | Paralleling of Batteries         | 7         |
| <b>6.0</b> | <b>OPERATION</b>                 | <b>7</b>  |
| 6.1        | Initial Charge                   | 7         |
| 6.1.1      | Cyclic Charge Voltage            | 7         |
| 6.2        | Float Voltage                    | 7         |
| 6.2.1      | Float Voltage Requirements       | 8         |
| 6.2.2      | Float Temperature Compensation   | 8         |
| 6.3        | Maximum Charge Current           | 8         |
| 6.4        | Recharge                         | 8         |
| 6.5        | Equalisation Charge              | 8         |
| <b>7.0</b> | <b>STORAGE</b>                   | <b>8</b>  |
| <b>8.0</b> | <b>MAINTENANCE &amp; RECORDS</b> | <b>9</b>  |
| 8.1        | General Maintenance              | 9         |
| 8.2        | General Records                  | 9         |
| 8.2.1      | Installation Records             | 9         |
| 8.2.2      | Maintenance Records              | 9         |
| <b>9.0</b> | <b>BATTERY REPORT</b>            | <b>10</b> |

## SECTION 1 GENERAL INFORMATION

### 1.1 VALEN TOPIN 6-12V Battery

The VALEN TOPIN battery is a valve regulated lead-acid recombinant battery designed for stationary applications. The VALEN TOPIN battery uses Absorbed Glass Mat (AGM) technology. This type of battery has no special ventilation or handling requirements. Since the electrolyte in the battery is immobilised, the batteries are considered dry batteries and can be handled and shipped accordingly.

## SECTION 2 SAFETY INFORMATION

### 2.1 General Information

Lead-acid batteries require care in installation and maintenance. Unsafe installation or maintenance procedures can cause severe injury or death. Electrical shock or burns, acid burns and fire can result if proper safety precautions are not followed. The following precautions apply to all battery installation and maintenance work. For more information, see the following sections:

- Disconnect all power before attempting to install, remove or perform maintenance work. When on-charge float voltage must be measured; be particularly careful because shorting a battery at this time can cause not only personal injury, but severe equipment failure also.
- Do not tamper with any parts of the battery including cover, vents, terminal covers, etc.
- Keep batteries clean and dry. Use ½kg of baking soda in 4L of water to neutralise any possible acid. Do not use cleaners or solvents on any part of the battery. Do not allow excessive dust to accumulate on the battery or cabling.
- Keep battery connectors clean, greased and tight. A loose connection can reduce battery standby time and cause battery fires.

### 2.2 Sulphuric Acid

The VALEN TOPIN battery is lead-acid battery and contains sulphuric acid in diluted form. Since the electrolyte is immobilised, in the event of case rupture, no liquid acid will leak or run from the battery. However, if the internal components of the battery are touched or handled, contact with the acid will result.

**CAUTION! Sulphuric acid can cause burns and serious injury if it meets your skin or eyes. In the event of contact with sulphuric acid, flush thoroughly with water and neutralise any residual acid with baking soda (1kg in 4L of water). Seek medical attention immediately. Do not handle batteries that have been dropped or where the container has been ruptured except while wearing rubber gloves. Do not try to disassemble a battery.**

### 2.3 Gassing

All lead-acid batteries emit some gases during charging and float operation. Conventional flooded batteries release all the gases produced to the environment whereas valve regulated batteries recombine most of the gases internally, releasing very little to the environment.

Compared to a flooded battery of equal capacity, a VALEN TOPIN battery releases a gas volume of 1% or less than the flooded battery. Due to this characteristic, no special ventilation is required under normal usage conditions.

Since some gas is released from lead-acid batteries, never charge or use batteries in an unventilated space or container. This gas consists of mostly hydrogen gas and can explode if ignited in a confined space or area. Keep sparks, flame or any other ignition source (including smoking materials) away from batteries.

**CAUTION! Hydrogen gas can explode and cause serious injuries and fire. Do not allow any flame or ignition source near batteries. Always allow some ventilation around operating batteries; contact VALEN if there are any questions regarding gassing or ventilation.**

### 2.4 Electrical Shock

Batteries store large amounts of electrical energy. Even a discharged battery can deliver a high short circuit current. Keep all metallic objects away from the battery terminals. Multi-cell systems can attain lethal voltages. Remove all jewellery before working on batteries. Cover all tools with vinyl electrical tape to minimise the possibility of shorting a battery during installation. Never lay tools or other metallic objects on batteries. Do not allow construction work over batteries to proceed unless the battery is protected by insulating rubber mats.

**CAUTION! Shorting a battery can cause serious injury, fire or explosion. Do not attempt to work on a battery unless you are familiar with battery installation procedures and have adequate safety information and equipment. Read this manual thoroughly before attempting to install a battery. If there are any other questions about safety, please contact VALEN before installing the batteries. Safety is always the primary concern.**

## SECTION 3 RECEIPT OF EQUIPMENT

### 3.1 Delivery Inspection

Immediately upon delivery, inspect the batteries for damage caused in transit. Damaged pallets or packing material or disarrayed batteries could indicate rough, improper handling in transit. Describe in details (take



photographs of the batteries still on the pallet) any damage on the delivery receipt before signature. If any damage is found, contact the courier immediately, request an inspection and file a damage claim.

### 3.2 Hidden Damage

Within 10 days of receipt, inspect all batteries for hidden damage. Measure and record open circuit voltages (OCV's). If any damage is found, request an inspection by the courier and file a hidden damage claim. Do not delay this step as it may result in a loss of right of reimbursement for hidden damages.

## SECTION 4 STORAGE

### 4.1 General

Do not store batteries outside, exposed to the elements. Store indoors in a cool, dry location. Do not store batteries in temperatures over 30°C. The recommended storage temperature is 20°C or less. Do not stack pallets or allow any other material to be stored on top of the pallets or possible battery damage may occur. Do not store where the possibility of metallic objects falling on the battery may occur.

### 4.2 Short Term Storage

If the batteries are to be stored for 6 months or less at 20°C, before being put into service, nothing need be done at this time. If the batteries are to be stored for longer than 6 months, at temperatures greater than 20°C, or installation is delayed beyond expected time, a storage charge may be required. A storage charge is an equalisation charge applied to a battery that is stored in open circuit (not float charging) condition. If the storage temperature is 20°C or less, VALEN TOPIN batteries must be charged at least every 6 months while in storage. For every 8°C increase above 20°C, the storage time between charges is cut in half. Therefore, at 28°C the max. storage time is 3 months. At 25°C the max. storage time would be 4-5 months. Storage of batteries beyond the recommended temperatures or storage time, without charging can result in loss of capacity, cell shorting and loss of float life. It can also void the battery's warranty. Keep careful records of battery storage time and handling.

## SECTION 5 INSTALLATION PROCEDURES

**CAUTION! Before attempting to install VALEN TOPIN batteries, study this section and the section on safety thoroughly. Failure to do so could result in personal injury and battery or equipment damage.**

### 5.1 Battery Location

#### 5.1.1 Temperature

Battery location is very important in determining life

and performance of the battery. The ideal environment would be a dry, indoors, temperature regulated area. The ideal operational temperature 20°C. Operation at temperatures below this will result in a loss of battery performance and may result in a larger, more costly battery being needed. Operation at temperatures above 20°C will result in loss of battery operational life. For every 8°C rise in battery temperature above 20°C, the life of the battery will be cut in half. For example, the VALEN TOPIN battery is designed for a 5-year float service life at 20°C. If the battery were to be continuously operated at 28°C, the life expectancy would be halved.

#### 5.1.2 Temperature Variation

Maintaining temperature balance across the string is important for max. battery life. The difference between the max. and min. bloc temperature in a series string can be no more than 3°C. Excessive temperature variation will result in the need for equalisation and will shorten battery life. Sources of battery temperature variation can be placement of the battery system near a heat source such as radiators, power equipment, windows or heating vents. Air conditioning vents can also cause temperature variations. It is recommended that the battery location be designed, engineered and monitored to minimise temperature variations.

#### 5.1.3 Ventilation

Proper ventilation of VALEN TOPIN batteries is important for two reasons:

1. To minimise battery temperature variations,
2. To minimise build-up of potentially explosive hydrogen gas.

##### 5.1.3.1 Battery Temperature Variation

Recombinant batteries such as VALEN TOPIN batteries, give off a small amount of heat during charging and float operations. Proper ventilation is important to remove this heat and to prevent temperature differences from arising in the string. If the batteries are installed in a cabinet, it should be designed to allow unobstructed air circulation and prevent temperature build-up. Use angle iron support rails instead of shelves. If the batteries are on racks, sufficient air circulation should be present to prevent temperature-layering effects. In an improperly designed room, there can easily be a 5°C difference in temperature between the floor and the ceiling. If this difference exists in a series string, it will result in a need for equalisation and in reduced battery life.

##### 5.1.3.2 Ventilation & Gassing

As noted, lead-acid batteries emit small amounts of gas during normal charging and floating. The gas

composition while on float is approx. 80% by volume hydrogen with the remainder being oxygen.

**CAUTION!** *Hydrogen gas can be explosive. Never install batteries in an airtight enclosure. Ventilation must be provided to remove this hydrogen gas. Allow about 1L/hr/battery of air exchange to prevent hydrogen accumulation.*

**NOTE!** *In most cases, the amount of air circulation required for battery cooling and temperature variation maintenance will far exceed the amount of air circulation required to prevent gas build-up. However, ensure some air exchange is present in the ventilation.*

#### 5.1.4 Floor Loading

Before installing the batteries, it should be ascertained that the floor has the capability to support the weight of the battery, rack or cabinet and related equipment. The total system weight will be the sum of the batteries, rack or cabinet plus 5% for the battery connectors. It is the responsibility of the installer to ensure adequate floor load carrying capabilities.

#### 5.2 Seismic Considerations

VALEN TOPIN batteries are capable of withstanding seismic events of UBC Zone 4 magnitude when properly installed in a suitably designed cabinet or rack. When seismic capability is desired, suitable floor anchoring should be provided. Proper floor anchoring is the responsibility of the installer.

#### 5.3 Installation - Cabinets

When installing VALEN TOPIN batteries in cabinets, follow the recommendations of section 5.1.3.1 regarding cabinet ventilation. Ensure that the batteries are electrically insulated from the cabinet frame. Standard battery spacing is 12mm min. between battery blocs. If the cabinets are to be seismic rated, the batteries must be firmly strapped or otherwise attached to the cabinet to prevent battery shifting during a seismic event. Proper installation is the responsibility of the installer.

#### 5.4 Installation - Racks

##### 5.4.1 Existing Racks

When VALEN TOPIN batteries are to be installed in existing racks, ensure that the racks are:

1. Of proper size for the intended battery,
2. Have sufficient weight carrying capability for the intended battery, including seismic considerations, and of sufficient size to hold the number of blocs (plus the 12mm needed between blocs) for the complete system. Before the new batteries are installed, touch up any nicks, scratches or acid marks on the rack with paint provided by the manufacturer. Ensure that the rail insulators are in good con-

dition or replace. Check that the rack is level and re-level if necessary. Check the floor anchors and retorque all bolts of the rack to the manufacturer's specifications.

##### 5.4.2 New Racks

Assemble the rack according to the manufacturer's instructions. Ensure that the rack is level and all bolts are properly torqued.

##### 5.4.3 Installation

Determine the location of the positive and negative terminals of the battery with respect to the rack location. When placing batteries on the rack, alternate the polarities for proper intercell connection. Standard spacing between blocs is 12mm. Position the batteries on the rack. Do not drop.

#### 5.5 Electrical Connections

Proper battery electrical connections are very important for the best battery performance and utility. Improper battery connections can cause a loss of standby time or even a battery fire. Follow the electrical connection instructions carefully and review section 2.4 thoroughly before working on the battery.

**CAUTION!** *Remove all items of the jewellery before installing the connectors on the batteries. Ensure that all tools are insulated with vinyl electrical tape to prevent shorting. Do not reach or lean across batteries on step racks. Remember, hazardous voltages are present. Be aware of what you are touching at all times.*

##### 5.5.1 Cabling Recommendations

Battery ratings are specified at the terminals of the battery. The cabling used to connect the battery terminals to the load has a voltage drop (when the battery is discharging) that is dependent on cable length and conductor size. The longer the cable run, the greater the voltage drop. The smaller the cable wire diameter, the greater the voltage drop. Therefore, to get the best performance from the battery short, heavy cables are recommended. Do not size the cables based on current carrying capacity only. A general rule of thumb is to allow no more than a 30mV of voltage drop/metre of cable run. As an example, if it is 10 metres from the battery to the load, the cable should be sized to allow no more than  $2 \times 10 \times 0.030 = 0.6V$  drop. Interbloc cables are provided, in order to help select cable sizes for inter-tier and load connections, the following table should be consulted:



| Cable Size | mm <sup>2</sup> | Max. Amps<br>30mV drop/m |
|------------|-----------------|--------------------------|
| 8 AWG      | 8.4             | 15                       |
| 6          | 13.3            | 23                       |
| 4          | 21.2            | 37                       |
| 2          | 33.6            | 59                       |
| 1          | 42.4            | 74                       |
| 0          | 53.5            | 93                       |
| 00         | 57.4            | 117                      |
| 000        | 85.0            | 148                      |
| 0000       | 107.2           | 187                      |
| 250 MCM    | 126.7           | 221                      |
| 350 MCM    | 177.4           | 309                      |
| 400 MCM    | 202.4           | 353                      |

Use 1.74Amps/mm<sup>2</sup> for other cable sizes.

### 5.5.2 Terminal Preparation

Gently clean the contact surface of the terminals with a brass bristle brush or a Scotch Brite pad. Immediately after this cleaning, apply a thin layer of No-Ox-Id 'A' or NCP-2 antioxidant grease to the contact areas. A petroleum jelly such as 'Vaseline' may also be used.

### 5.5.3 Connector Installation

The VALEN TOPIN batteries are supplied with hardware to attach the copper interconnects or cables. Install the cables (positive of one battery to negative of the next) and the hardware. Hand tighten only at this time to allow room for positioning of the blocs. Once all cables are in place, all connections should be torqued to the values below:

|               |                       |
|---------------|-----------------------|
| 12 TP 21-33   | 5.1Nm (45 in pound)   |
| 12 TP 40-100  | 7.4Nm (65 in pound)   |
| 12 TP 120-200 | 11.4Nm (100 in pound) |

### **DO NOT OVER TORQUE!**

**CAUTION! Use extreme care not to short the battery connections. VALEN TOPIN batteries are capable of very high short circuit currents containing a very high energy level.**

Install the inter-tier cabling at this time, following the same general instructions as for installing the interbloc connections. Attach the inter-tier cabling to the wall or the rack so that the weight of the cable is not on the battery terminal. If using a stiff cable, pre-bend the cable so no 'spring' force is placed on the battery terminals. Failure to support the cable weight could

result in a premature battery failure and loss of battery integrity.

### 5.5.4 Voltage Checks

Visually check that all connections are properly made (positive to negative) and are tight. Measure the total string voltage.

**CAUTION! High voltage present.**

The total string voltage should be approx. 12.5V or 6.25V, batteries multiplied by the no. of blocs in the string. If the measured string voltage is not close to the calculated value, recheck the battery connections to ensure proper polarity sequence and measure the individual bloc voltages. Calculate the average bloc voltage and use this value to refigure the string voltage. If the recalculated and measured string voltages do not match reasonably well, contact VALEN for further instructions.

### 5.5.5 Battery to Charger Connection

Ensure that the charger is disconnected from the power line. If a battery disconnect is installed, open it. The positive terminal of the battery bank should be connected to the positive terminal of the charger and the negative terminal of the battery bank should be connected to the negative terminal of the charger.

### 5.5.6 Paralleling of Batteries

When greater battery capacity is desired than what's available from a single cell or string, paralleling of a battery becomes necessary. Batteries must be properly paralleled in order to get the best system performance and longest battery life. The battery strings must be treated as equally as possible. This means equal length cabling to a common collection point for the load cables, uniform temperature between the strings and equal strings of batteries. Do not parallel flooded batteries with Valve Regulated batteries as the charge voltages differ between the types of batteries. To check the proper paralleling of the strings, connect the strings in the final form and place a load on the battery. Measure the load cable voltage drops. The voltage drops should match within 10%.

## SECTION 6 OPERATION

### 6.1 Initial Charge

VALEN recommends that VALEN TOPIN batteries be given an initial charge/equalisation charge at the time of installation in order to ensure that the batteries are fully charged and the bloc voltages are uniform. If an initial charge is not given at the time of installation, then bloc float voltages may take some months to

become uniform. The initial or equalise charge voltage for the VALEN TOPIN batteries is 2.35VPC at 20°C. Calculate the initial charge voltage for your installation based on either the no. of cells in the string or the no. of blocs on the string. Turn on the charger and raise the charger output voltage (using the equalisation control) to the calculated value. Leave the string charging at this level for 24 hours. At the end of this time, reduce the charger output voltage to the float voltage level. See section 6.2. Just prior to reducing the string voltage to the float voltage, measure the bloc voltages and charge current is possible. If the charger output cannot be raised to the calculated initial charge voltage or the load cannot tolerate a charge voltage this high, raise the charger output voltage to the max. permissible level. Measure the charger output voltage/cell. Use the following as a guideline:

| Max. Voltage Obtained (20°C) | Charge Time (hrs) min./max. |
|------------------------------|-----------------------------|
| 2.33-2.35VPC                 | 12/24                       |
| 2.31-2.33VPC                 | 36/48                       |

At voltages below 2.29VPC adequate equalisation will not be obtained. Contact VALEN for additional details on procedures to equalise a battery under these conditions. If the ambient temperature is not 20°C, the initial charge voltage will have to be temperature compensated (TC).TC is the process whereby the charge voltage is changed as the function of the battery temperature. The temperature correction factor (TCF) for VALEN TOPIN batteries is -0.005V/Cell/°C from a 20°C baseline temperature. As the battery temperature rises (falls) above (beneath) 20°C, the charge voltage must be reduced (raised) the TCF amount for every degree of change. The formula to calculate the temperature corrected voltage is:  
 $TCV = CV(20^\circ C) \pm (32 - 20) \times (-0.005VPC) = 2.29VPC$   
 As an example, if the initial charge was going to be performed at 32°C, the temperature corrected reduced, charge voltage would be:  
 $TCV = 2.35 - (32 - 20) \times (-0.005VPC) = 2.29VPC$

### 6.2 Float Voltage

The float voltage is sometimes known as the continuous charge voltage. It is very important that it be calculated and set properly for max. battery life and performance. The purpose of the float voltage is to provide enough float voltage and current to the battery to compensate for the battery self-discharge and maintain the battery in a fully charged condition of readiness. Failure to properly follow float voltage recommendations can result in loss of warranty and

premature battery failure.

#### 6.2.1 Float Voltage Requirements

The recommended float voltage for the VALEN TOPIN batteries is 2.25VPC at 20°C ± 1°C.

#### 6.2.2 Float Voltage Temperature Compensation

The float voltage temperature compensation factor is 0.005Volts/Cell/°C from a 20°C baseline (the same as the equalisation TCF). For other temperatures, use the following table:

| Temp. (°C) | Float Voltage VPC |
|------------|-------------------|
| 10         | 2.290             |
| 15         | 2.270             |
| 20         | 2.250             |
| 25         | 2.250             |
| 30         | 2.230             |
| 35         | 2.210             |

BASELINE

For temperatures outside of this range, see section 6.1 for the equation used for calculating the temperature corrected float voltage.

#### 6.3 Maximum Charge Current

The charge current is normally limited by using the recommended float voltage at 2.25VPC or

## SECTION 9 – BATTERY REPORT



# VALEN TOPIN BATTERY REPORT

Installed by:

Representative:

Operating Company:

Date:

Time:

## Battery Information

Type of Battery:

N<sub>e</sub> of Cells/String:

String Float Voltage:

Installation Date:

N<sub>e</sub> of Strings/Battery:

Battery Charge Current:

Battery Code:

Float Current:

Charging Equipment:

Ambient Temp.:

Bloc Temp.:

## Battery Charger Information

Make:

Type:

Current Rating:

Model:

Year of Manufacture:

Charging Voltage:

## INDIVIDUAL CELL READINGS

| Cell N <sub>e</sub> | Cell ID | Float Volts | Cell N <sub>e</sub> | Cell ID | Float Volts | Cell N <sub>e</sub> | Cell ID | Float Volts | Cell N <sub>e</sub> | Cell ID | Float Volts | Cell N <sub>e</sub> | Cell ID | Float Volts |
|---------------------|---------|-------------|---------------------|---------|-------------|---------------------|---------|-------------|---------------------|---------|-------------|---------------------|---------|-------------|
| 1                   |         |             | 26                  |         |             | 51                  |         |             | 76                  |         |             | 101                 |         |             |
| 2                   |         |             | 27                  |         |             | 52                  |         |             | 77                  |         |             | 102                 |         |             |
| 3                   |         |             | 28                  |         |             | 53                  |         |             | 78                  |         |             | 103                 |         |             |
| 4                   |         |             | 29                  |         |             | 54                  |         |             | 79                  |         |             | 104                 |         |             |
| 5                   |         |             | 30                  |         |             | 55                  |         |             | 80                  |         |             | 105                 |         |             |
| 6                   |         |             | 31                  |         |             | 56                  |         |             | 81                  |         |             | 106                 |         |             |
| 7                   |         |             | 32                  |         |             | 57                  |         |             | 82                  |         |             | 107                 |         |             |
| 8                   |         |             | 33                  |         |             | 58                  |         |             | 83                  |         |             | 108                 |         |             |
| 9                   |         |             | 34                  |         |             | 59                  |         |             | 84                  |         |             | 109                 |         |             |
| 10                  |         |             | 35                  |         |             | 60                  |         |             | 85                  |         |             | 110                 |         |             |
| 11                  |         |             | 36                  |         |             | 61                  |         |             | 86                  |         |             | 111                 |         |             |
| 12                  |         |             | 37                  |         |             | 62                  |         |             | 87                  |         |             | 112                 |         |             |
| 13                  |         |             | 38                  |         |             | 63                  |         |             | 88                  |         |             | 113                 |         |             |
| 14                  |         |             | 39                  |         |             | 64                  |         |             | 89                  |         |             | 114                 |         |             |
| 15                  |         |             | 40                  |         |             | 65                  |         |             | 90                  |         |             | 115                 |         |             |
| 16                  |         |             | 41                  |         |             | 66                  |         |             | 91                  |         |             | 116                 |         |             |
| 17                  |         |             | 42                  |         |             | 67                  |         |             | 92                  |         |             | 117                 |         |             |
| 18                  |         |             | 43                  |         |             | 68                  |         |             | 93                  |         |             | 118                 |         |             |
| 19                  |         |             | 44                  |         |             | 69                  |         |             | 94                  |         |             | 119                 |         |             |
| 20                  |         |             | 45                  |         |             | 70                  |         |             | 95                  |         |             | 120                 |         |             |
| 21                  |         |             | 46                  |         |             | 71                  |         |             | 96                  |         |             | 121                 |         |             |
| 22                  |         |             | 47                  |         |             | 72                  |         |             | 97                  |         |             | 122                 |         |             |
| 23                  |         |             | 48                  |         |             | 73                  |         |             | 98                  |         |             | 123                 |         |             |
| 24                  |         |             | 49                  |         |             | 74                  |         |             | 99                  |         |             | 124                 |         |             |
| 25                  |         |             | 50                  |         |             | 75                  |         |             | 100                 |         |             | 125                 |         |             |

Remarks and Recommendations:

Signed:





Powering Potential

AUSTRALIA

1300 734 253

sales@valen.com.au

www.valen.com.au

NEW ZEALAND

0800 734 253

sales@valen.co.nz

www.valen.co.nz